
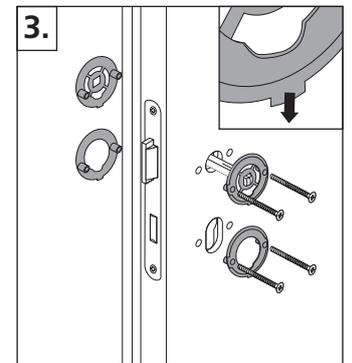
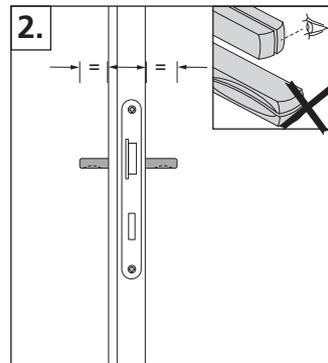
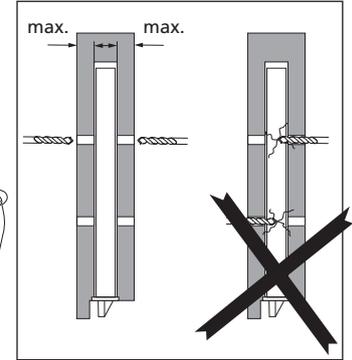
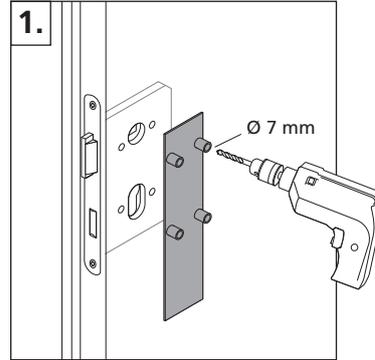
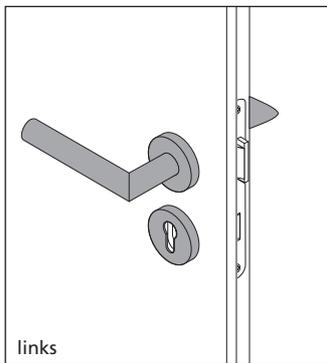
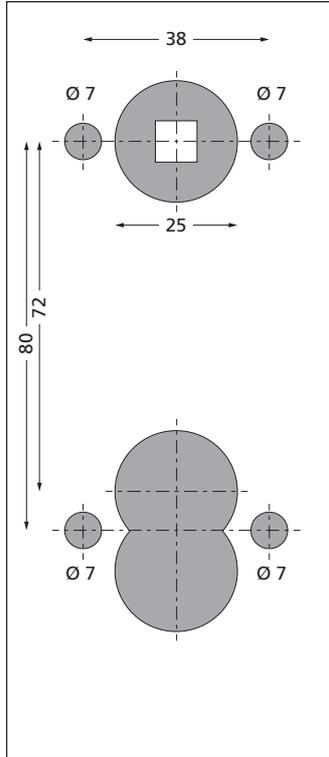


Montage nur von Fachpersonal durchführen lassen.
Zur fachgerechten Montage Bohrlehre verwenden. (scoop Artikel 000133).
Die Garnitur ist wartungsfrei.






1. Bohrlehre senkrecht ausrichten.
! Achtung ! Löcher $\varnothing 7$ mm von beiden Seiten präzise bohren.
Nicht durchbohren, ansonsten kann das Schloss beschädigt werden!
2. Vierkant mit Spalt vertikal ausgerichtet in die Schlossnuss einsetzen, sodass die gekerbte Seite nach unten gerichtet ist.

3. Bei den Unterkonstruktionen **LINKS** und **RECHTS** beachten. Beidseitig mit Justierzapfen unten über den Vierkant schieben und zusammendrücken bis die Stütznocken sauber in den vorgebohrten Löchern sitzen. Unterkonstruktionen miteinander verschrauben. **! Achtung !** Bitte beachten Sie, dass nicht jeder Türtyp im Schlossbereich gleich stabil ist. Die Schrauben dem Türtyp entsprechend festschrauben.

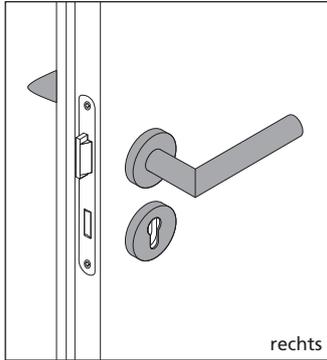

4. Kunststoff-Führungen an den Sollbruchstellen ausbrechen und entfernen.
5. Drücker mit Rosetten aufklippen, korrekten, bündigen Sitz kontrollieren. Madenschrauben fest anziehen.

Zur Demontage beide Madenschrauben lösen, mit Hilfe eines Rosettenhebers von den Unterkonstruktionen abklippen.

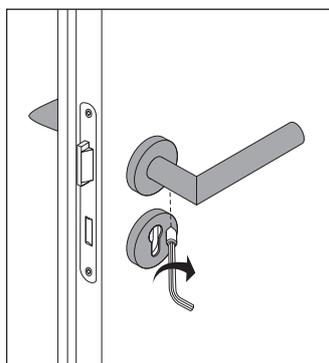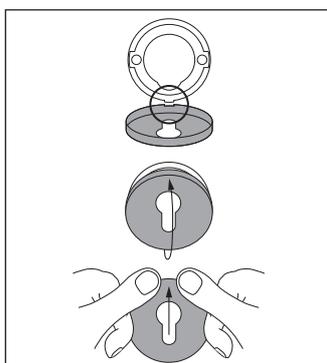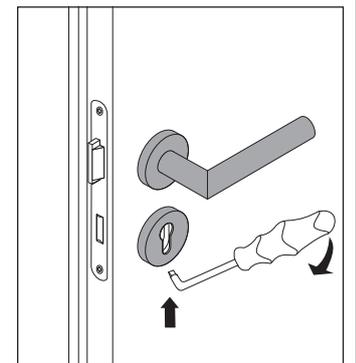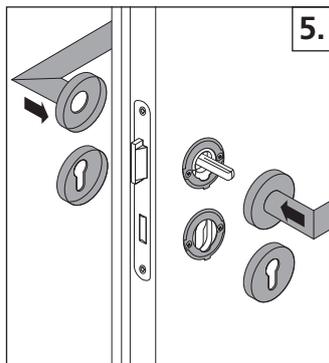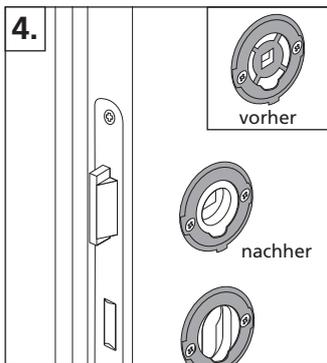

Assembly instruction for original:

formspiele®










Assembly by professionals only!

Use a drilling template for competent installation. (scoop article 000133)
The door handles are maintenance-free.

1. Align drilling template vertically
! Attention ! Drill holes $\varnothing 7$ mm from each side precisely.
Don't drill through to avoid damaging the mortise lock!

2. Insert spindle, side with slot aligned vertically, into the mortise lock, so that the notched side is directed downwards.

3. Follow **LEFT** and **RIGHT** sides of bases, push on both sides spindle. Push until the supporting cams countersink into in the drilled holes. Screw the bases together.
! Attention! Please note that not every door type in the lock area is equally stable. Tighten screws according to door type.

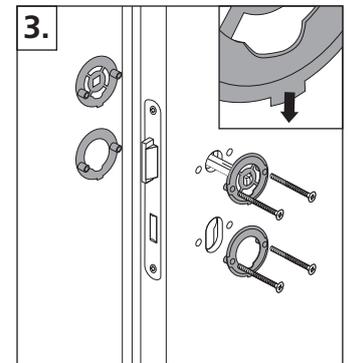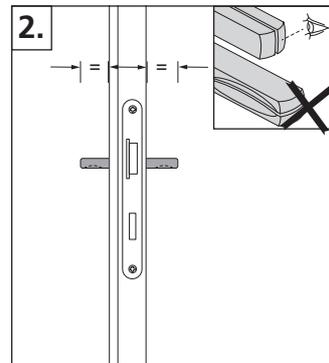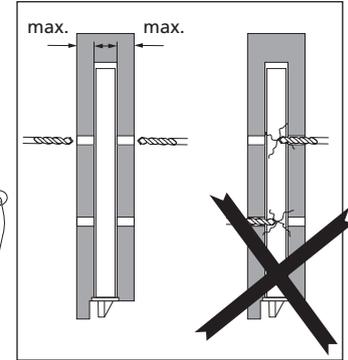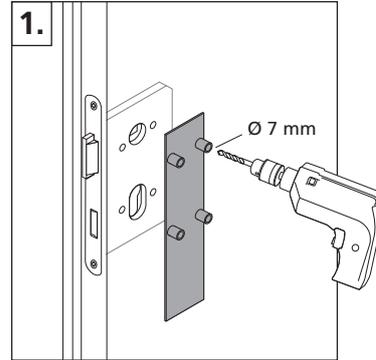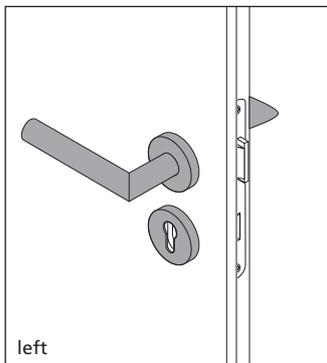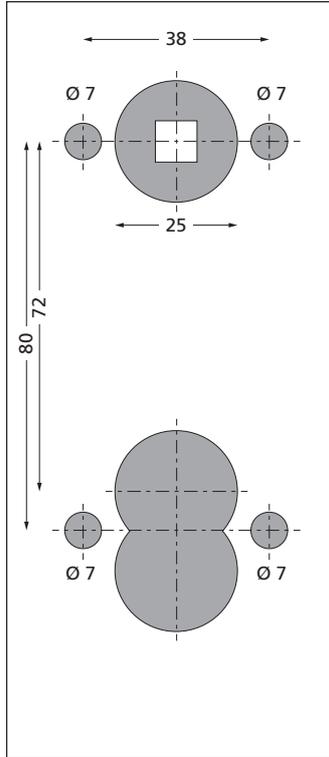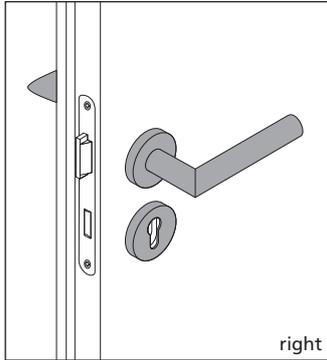

4. Break inner plastic part on the pre-defined breaking areas and remove.

5. Clip on handles with rosette. Check the correct, flush position, tighten the grub screws firmly.

To dismantle, loosen both grub screws. Using a rosette lifter, unclip the rosettes from the bases.

